
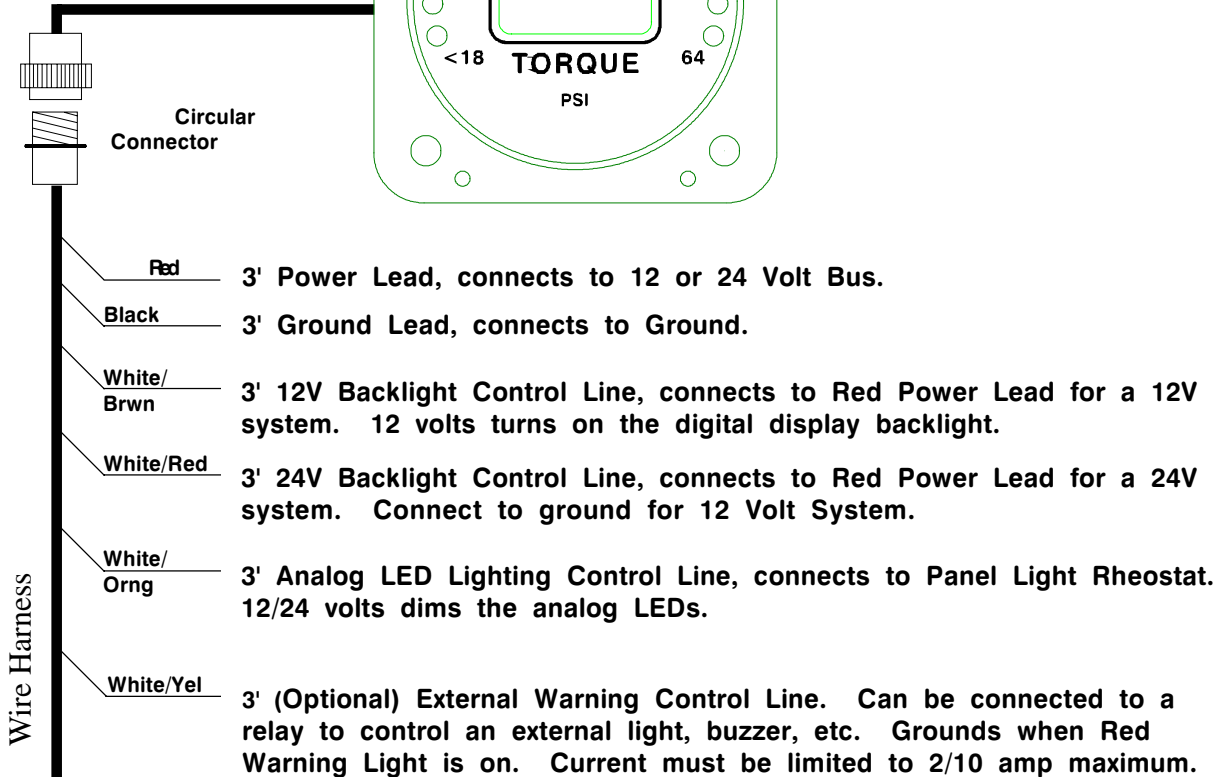



M-1T Wiring Diagram

WD 0731012

Do not use screws longer than 1/2" (4 ea.).

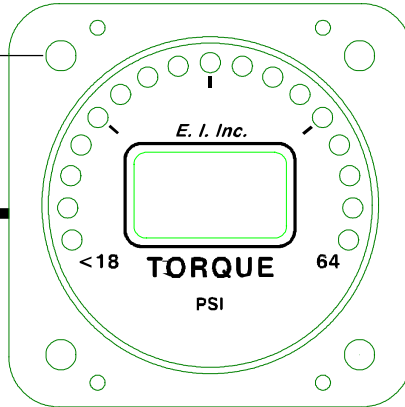

Connect the same color of 6' wires from the unit to the pressure transducer. Connectors are supplied in the kit. Be sure these wires are connected properly.

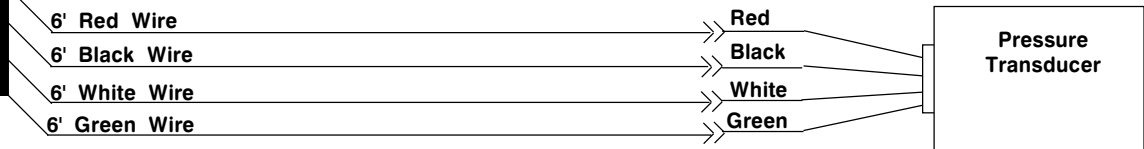

Install Connectors. Double wires and crimp tight when installing connectors.

M-1T Circular Connector

WD 0727011

Connecting Cable Harness, Back View (wire side)

OR

Instrument Connector, Front View

